

## Height Increment

If the total stripping ratio for the pit exceeds the specified Maximum Acceptable Stripping Ratio, the minimum elevation to be considered will be increased by the Height Increment with each successive pass. If set to Automatic, this increment will be equal the height of one voxel which can result in unacceptable execution speeds for high-resolution models. The Manual setting provides a means to move the base upwards in larger increments at the possible expense of leaving unmined ore below the base of the pit

